# TT6000

# **QUICK INSTALL GUIDE**





### **STEP 1** Determine Installation Options

Depending upon the requirements, the device can be installed with following options.

Type1: Device Only Type2: TT6000 with Starter Kill/input/output
Type3: TT6000 with Driver ID Type4: TT6000 with Driver ID & PERF

### STEP 2 Complete the wire connections according to the required options

Red: 12 Volts (+) Constant Yellow/Black: Input 1(-)
White: Ignition (+) (MUST be a true ignition source)
Yellow/Orange:Input 2(-)

 Black:
 Ground

 Yellow/Green:
 Input 3(-)

 Green:
 Starter kill (-)

 Yellow/Red:
 Input 4(-)/PERF Switch Input

Purple: PERF Switch GroundGreen/Blue:Buzzer OutputGrey: iButton InputGrey/Black:iButton Input

- GROUND MUST BE CONNECTED DIRECTLY TO CHASSIS WITH PAINT REMOVED -

## STEP 3 Position the device in an Optimal Location

Failure to adhere to these suggestions will result in a weak cellular and/or GPS signal and will affect the performance of the device.

- Secure in upper portion of dash in a hidden location with correct side pointing skyward (label will indicate proper orientation). Example: Above instrument cluster.
- Do not cover with metal or position near any source of interference (Vehicle Radio, BCM). Keep a safe distance of at least 24".


### STEP 4 Connect OBD/JBUS(Optional) STEP 5 Confirm LED Status


Refer to the TT6000 OBD/JBUS Connections on the following page

Orange: Flashing Connected/Online Green: 1Flash/Sec Valid GPS

### To TEST, call the numbers ABOVE!

#### TYPE 1 TT6000 Only

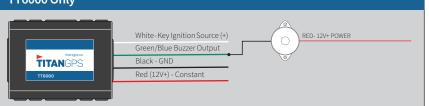

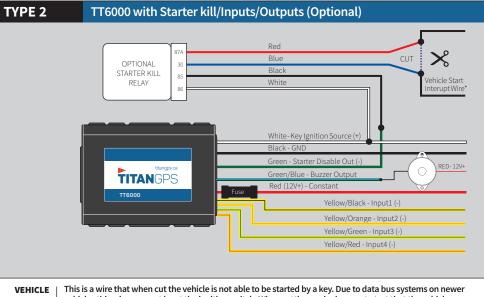

VEHICLE START INTERUPT WIRE

This is a wire that when cut the vehicle is not able to be started by a key. Due to data bus systems on newer vehicles this wire may not be at the ignition switch. When cutting a wire be sure to test that the vehicle cannot be started by key and when reconnected the vehicle starts without fault codes being displayed by the vehicle. <u>DO NOT CUT</u> THE WIRE THAT WILL SHUT DOWN THE VEHICLE WHEN RUNNING BY THE KEY.

