



**! IMPORTANT**

**MUST BE TESTED**

CALL TO TEST GPS TRACKING DEVICE BEFORE CLOSING UP DASH  
FAILURE TO FOLLOW THESE INSTRUCTIONS M  
DAMAGE EQUIPMENT AND VOID ITS WARRANTY

**CALL NOW**

**1.780.391.3800**  
TOLL-FREE 1.855.287.4477 (CTS4GPS)

CERTIFIED TRACKING SOLUTIONS

**DOWNLOAD THE TITAN GPS LOGBOOK APP**  
SEARCH TITAN GPS ELECTRONIC LOGBOOK



### STEP 1 SELECT THE PORT TYPE

Determine the type of port that you will be installing the device. Either an OBDII port found in light to medium duty sized vehicles, or JBUS port found in heavy duty vehicles.

### STEP 2 DETERMINE THE INSTALLATION METHOD AND CABLE IF REQUIRED

- a) Direct Installation either into the OBDII port or JBUS with a direct connect cable.
- b) Indirect installation into the OBDII port or JBUS with a relocation Y-cable.

### STEP 3 CONFIRM LED STATUS

Green: Flashing      Online/Valid GPS

### STEP 4 TEST

To TEST the device, call us NOW!


### STEP 5 PAIR THE TITAN GPS LOGBOOK APP TO THE ELD DEVICE

Select "CONNECT" in the Titan GPS Logbook App and follow the steps to pair the device. (Must have an ELD account login setup by company administrator)


## OBDII INSTALLATION

DIRECT

Plug directly into Vehicle OBD Port. Ensure that device LED illuminates after plugged in.

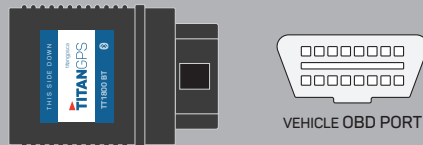

INDIRECT

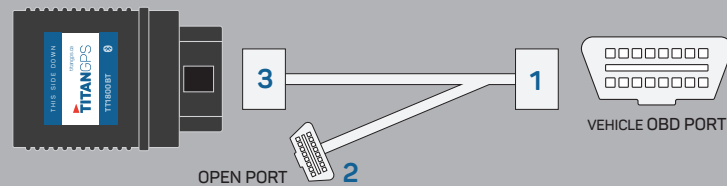


1. Unclip/unscrew vehicle OBD port from factory mounted position
2. Plug the male end of direct connect cable (1) to unmounted vehicle OBD port
3. Mount short (female OBDII) end (2) of direct connect cable to factory mounting position.
4. Plug in the device to long female OBDII end (3) of direct connect cable and position under top skin of dash. Ensure correct side is facing up.


## JBUS INSTALLATION

DIRECT

1. Plug the device into the male OBDII end (1) of direct connect cable.
2. Connect the male JBUS end (2) of direct connect cable to the vehicle JBUS port.
3. Mount the device with correct side facing up.

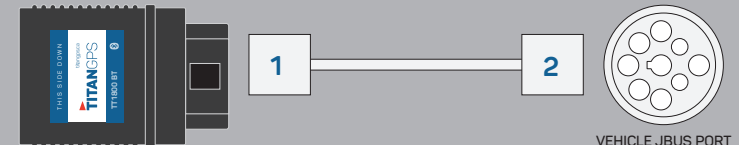

INDIRECT

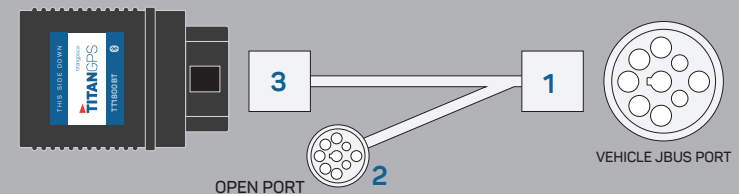

1. Unclip/unscrew vehicle JBUS port from factory mounted position
2. Plug the male end of direct connect cable (1) to unmounted vehicle JBUS port
3. Mount short (female JBUS) end (2) of direct connect cable to factory mounting position.
4. Plug in the device to long male OBDII end (3) of direct connect cable and position under top skin of dash. Ensure correct side is facing up.